



Wool Electric Blanket

Instruction Manual
Model MA0275EB-QFW
MA0276EB-KFW

Read in full and retain for future use

Electrical Safety and You

Before using this appliance please read and fully understand the safety directions in this manual. Ensure that you know how to operate the appliance. All electrical equipment presents a risk to the end user. We ask that you use this appliance in a sensible safe manner in accordance with the instructions supplied for your own safety. If for any reason the appliance does not function correctly or shows signs of damage please return it immediately to the retailer or contact the help line.

Contact enquiry@micasa-appliances.com

Visit www.micasa-appliances.com

Helpline

New Zealand call toll free 0508-274-2722

Australia call +64-9-974-9206

Features

- ✓ New Zealand Wool
- ✓ Fitted design
- ✓ Twin control
- ✓ LED display
- ✓ 9 heat settings with timer
- ✓ 1800mm x 2030mm
- ✓ Electronic overheat protection

Warning! For blankets fitted with a detachable controller (optional) the blanket must only be used with a controller marked with the same model number as the blanket.

Operation Guide

Carefully read this manual in full before using this electric blanket

• Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals.

This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals.

• Fitting

The Wool Electric Blanket has a deep 45cm wall, fitted with robust elastic, which helps to keep the blanket securely fixed in place during the night, plus, this design feature makes it easier for you to fit and remove from your bed.

Remove any promotional material and all packaging from the electric blanket.

Ensure the size of the blanket is suitable for the size of the bed. (A queen blanket should never be used on a king/double/single bed)

Follow the instructions below for fitting; it is important that you DO NOT tuck in the wires of the electric blanket.

1. Lay the electric blanket on top of your mattress, so that the 45cm elastic wall is visible and the controllers are underneath the blanket, and fed through the fitted wall at the pillow end of your bed. Ensure the blanket does not hang over the sides of the bed and the heating wires are kept clear of the pillow section.
2. Smooth out any folds or creases, and then secure the fitted elastic wall to each of the four corners and the sides of the mattress. Pull on the edges of the blanket to ensure that it sits flat and level on the mattress.
3. Once the electric blanket has been correctly fitted to your bed, you can make your bed as normal.

NOTE: DO NOT COVER THE CONTROLLER; ALWAYS ENSURE THAT IT IS UNCOVERED.

• Operation

Dual controls are available for the Queen and King sized electric blankets. This allows you to control the temperature on each side of the bed and provide individual comfort.

The blanket can be set to work from 1 to 12 Hours and from 16°C to 60°C.

Note! The timer has no 10 or 11 hour setting and operates from 1 to 9 and then 12 (H) setting only.

Plug the supply cord and plug into a suitable power outlet and switch on.

1. Switch the blanket power on by pressing the **ON/OFF** switch to the **ON (I)** position.

2. The temperature setting will be displayed on the screen to the left.
3. The timer setting will be displayed on the screen to the right.
4. Adjust the temperature setting by pressing the temperature button. 1 being the lowest and 9 being the highest.
5. Press the timer button to adjust the timer settings. The timer will jump from 9 hours to H setting (12 hours). The blanket will heat for the selected time period.

- **Specific Electric Blanket Warnings**

Ensure that you know how the electric blanket functions and how to operate it.

Maintain the electric blanket in accordance with the instructions to ensure that it functions properly.

Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

Warning! No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

Warning! The blanket should not be used on an adjustable bed.

Warning! Do not use the electric blanket folded. Do not use the electric blanket rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket. Do not use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat. Do not use with a helpless or incapacitated person or any person suffering from medical illness such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the supplier prior to any further use.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or damp.

Warning! Do not sleep with the controller set to **HIGH**. Use HIGH setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched off for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from the mains supply, do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30 mA.

Warning! The appliance must be returned to the manufacturer or his agent if the fuse/thermal link is ruptured. No serviceable parts.



Important Safety Instructions



Warning! Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision or instruction concerning safe use of the appliance by a person responsible for their safety. Young children must be supervised to ensure that they do not play with the appliance. Safely dispose of any plastic bags or other packaging that may present a hazard to young children of suffocation or choke hazard.

Children

This blanket is not to be used by young children unless the controls have been pre-set by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance

safely. Young children should be supervised to ensure that they do not play with the appliance.

Warning! Unattended Appliances

Do not leave any appliance unattended when in use or connected to the mains power or near children. Always unplug any appliance when not in use for any length of time.

Safety

For household indoor use only, do not use outdoors. Not for commercial use.

This appliance must not be operated by means of an external timer or separate remote control system.

Warning! Potential injury from misuse

Power cord

Do not abuse or damage the supply cord. If for any reason the cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. A replaceable cord must be replaced with an authorised replacement from an authorized service agent.

Warning! When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury

Always check that the power supply corresponds to the voltage on the rating plate.

Supply

This electric blanket must be connected to a suitable 230-240 V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat. **Warning!** Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Store

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease.

Store in a suitable protective bag for protection. Do not crease the blanket by placing heavy items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused return it to the supplier prior to any further use for checking

Service

Refer all servicing to qualified personal. This appliance has no user servicing parts or requirements. Return the appliance to the retailer if it is damaged in any way or not operating properly.

Specifications

KING WOOL ELECTRIC BLANKET

Model: MA0276EB-KFW

220-240V~50Hz, 2x70W

Only use controller Model: RU1-1A/T9

Fabric: NZ Wool + Polyester

QUEEN WOOL ELECTRIC BLANKET

Model: MA0275EB-QFW

220-240V~50Hz, 2x60W

Only use controller Model: RU1-1A/T9

Fabric: NZ Wool + Polyester

Distributed by

Asia Pacific Brands Limited

PO Box 301145,

Auckland 0752,

New Zealand

The logo for Micasa, featuring the brand name in a stylized, lowercase, handwritten-style font. The letters are black and have a slightly irregular, artistic feel. A thin, horizontal line is drawn underneath the letters, starting from the 'm' and ending under the 'a'.

MAINTENANCE

Always check that the electric heated throw is in good working order before use. Check the controller, power supply cord and plug frequently for cuts and damage. Do NOT attempt to service this electric heated throw. There are NO user-serviceable parts. If it is faulty in any way, return it to the retailer immediately.

ANNUAL CHECK

To ensure its safety and suitability for use, we recommend you have a qualified person check this electric heated throw annually.

STORAGE

When not in use, pack the electric heated throw with the instruction manual in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the electric heated throw.

WHEN NOT IN USE AND BEFORE WASHING/CLEANING YOUR ELECTRIC HEATED THROW, ENSURE CONTROLS ARE UNPLUGGED FROM THE THROW AND POWER SOCKETS.

DRY CLEANING

Micasa's electric heated throw are NOT suitable for dry-cleaning. Doing so may damage the heating element or control.

SPOT-CLEANING

1. Detach controller/electrical cord.
2. Sponge the offending area using lukewarm water and a mild detergent or soapy solution. Follow this sponging process using clean water.
3. Remove any excess water by compressing the wet area between absorbent towelling.

MACHINE-WASHING

1. Detach controller/electrical cord from the electric heated throw.
2. The electric heated throw is suitable for washing in a machine under 40°C on a gentle washing cycle.
3. Slow spin-dry only. DO NOT use an extra spin cycle.
4. Pull to shape upon removing from washing machine. Adjust wires if they become taught.

HAND-WASHING

1. Detach controller/electrical cord from the electric heated throw. Ensure liquid does not enter the controllers, secure away from any dripping water.
2. Use a mild washing powder or detergent and lukewarm water to soak the electric heated throw for 15 minutes. After soaking, gently wash the throw and rinse thoroughly with fresh lukewarm water.
3. Allow the excess water to drain from the throw. It may be gently squeezed, but never twist or wring the electric heated throw as this may damage the internal heating wires.

DRYING

Drape the electric heated throw across a clothesline. DO NOT use pegs to secure the electric heated throw in position as doing so may damage the heating wires. DO NOT dry with a hair-dryer or heater. Line dry out of direct sunlight. DO NOT use until completely dry. DO NOT tumble dry.

NOTE: CONTROLLER MUST ONLY BE RE-ATTACHED ONCE THE ELECTRIC HEATED THROW IS COMPLETELY DRY. DO NOT IRON THIS ELECTRIC HEATED THROW