

Micasa



CONVECTOR HEATER

Instruction Manual

Model: MA0278CH-B1500 & MA0279CH-B2000

Read in full and retain for future use

Micasa

MICASA branded product provides an affordable range of well presented, elegant home ware and appliances. Products which are ranged and selected are chosen to suit your contemporary lifestyle and cater for your home ware needs today. Micasa aims to provide products which are fashionable, affordable, and reliable to meet your home ware demands.

MICASA will provide value for money products to make every day home life more enjoyable and convenient.

The **MICASA** range of products is continually developing and new products will be introduced with expansion of the range. So keep in touch for further news on new products in the future.

We hope you enjoy your experience with **MICASA**

Contact enquiry@micasa-appliances.com

Visit www.micasa-appliances.com

Helpline

New Zealand call toll free 0508-274-2722

Australia call +64-9-974-9206

Distributed by

Asia Pacific Brands Limited

PO Box 301145,

Auckland 0752,

New Zealand

FEATURES

- ✓ 2 Heat settings
- ✓ Adjustable thermostat
- ✓ Over heat protection
- ✓ Indicator lights
- ✓ Wall mounted or castor wheels


WARRANTY

Retain your receipt as proof of purchase.

If for any reason the appliance does not function correctly or shows signs of damage please stop using immediately and return it immediately to the retailer.

This product is covered by a 12 month warranty by Harvey Norman (NZ) PTY Ltd. This warranty does not exclude any obligations to the consumer covered by the NZ Consumers guarantee act.

PARTS DETAILS

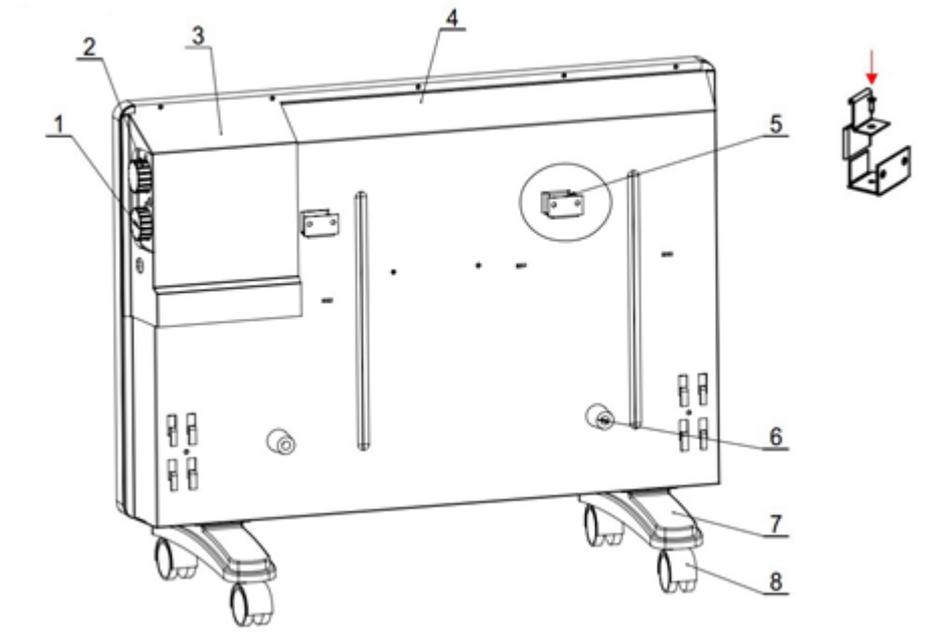

- 1. Power Switch
- 2. Thermostat
- 3. Control Panel
- 4. Rear Panel

- 5. Wall Mount Bracket
- 6. Rubber Post
- 7. Support Base
- 8. Castor

BEFORE FIRST USE

- Before first use remove any stickers or similar from the appliance. (Except the rating label! and Do NOT COVER warning).
- Dispose of any plastic bags responsibly as they pose a risk to young children of suffocation.
- Wipe the outside of the appliance with a moist cloth and dry with a towel.

ASSEMBLY

Installing the Castors

1. The heater is packaged with the feet unattached. You must attach them before operating the heater.
2. Lay the heater on a flat table with the bottom of the heater overhanging the edge slightly.
3. Align the foot and castors with the holes provided on the base of the heater.
4. Fix the feet to the heater using the screws supplied.
5. Stand the heater on its feet on a stable flat surface.


WARNING: Do not operate without feet attached. Operate the heater only in upright position (feet on the bottom, controls on the top), any other position could create a hazardous situation.

Wall Mounting


1. Attach the mounting brackets to the wall, using the bolts and nuts (supplied).

2. Place the heater, leaving the distance between the base device and the floor for at least 50 cm, and make sure that the distance between any upholstery and curtains is at least 1 m. Attach the rubber stops to the back of the device.
3. Place small brackets on the rear of the notches on the back of the heater (Position 5). Then screw the Small brackets to the larger ones. It is necessary to secure the convector on the wall.

MA0278CH-B1500

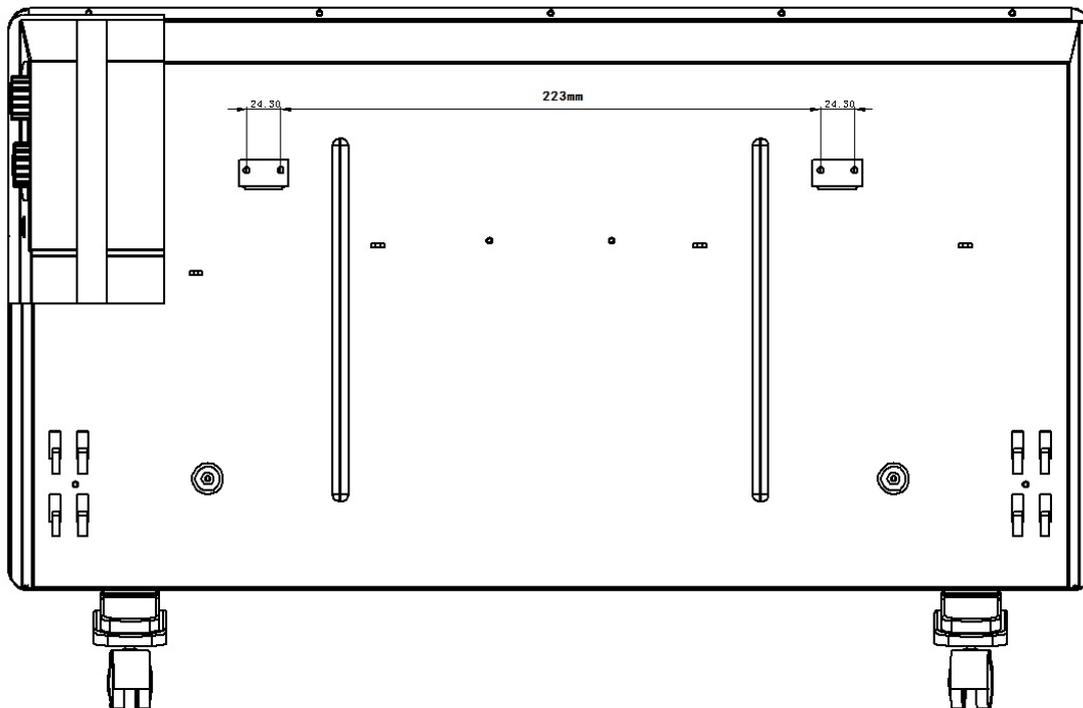

MA0279CH-B2000

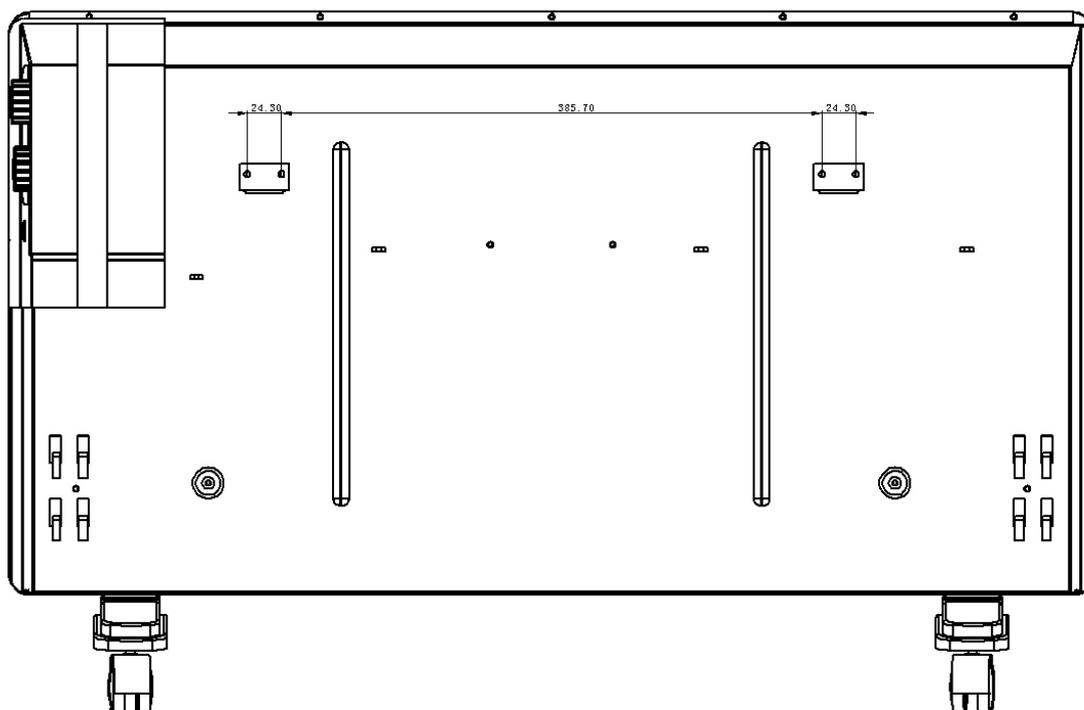

OPERATION

Before First Use

- Do not insert the plug before installing the wheels and ensuring the heater is standing securely.

NOTE: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time the heaters may emit some smells and fumes. This will disappear when the heater has been operating for a short while.

Location

- Place at least 1m from and curtains.
- Keep all combustible materials such as furniture, pillows, bedding, paper, clothes and curtains at least 1m away from heater.
- Do not place anything on top of Heater.
- Do not use in wet or moist locations; for example, bathrooms or laundry areas, or in areas where paint or other flammable or volatile liquids are used or stored.

Operation

1. Set all the controls to the OFF position (0) and insert the plug into a socket-outlet that is compatible with the rating label on the product. Be sure that plug fits firmly.
2. Rotate the thermostat knob clockwise to MAX position.
3. Turn on the power by rotating the power switch clockwise. Power output can be set to either of two power levels: LOW (I) and HIGH (II).
4. When your room reaches the desired temperature, slowly rotate the thermostat knob counter clockwise until the light goes out. The thermostat can now be left at this setting. As soon as the room temperature has dropped below the set temperature, the unit will switch itself on automatically until the set temperature has been reached again. In this way the room temperature remains constant with the most economical use of electricity.
5. If you want to change the room temperature setting, rotate the thermostat knob clockwise to raise the temperature, or counter clockwise to lower it.
6. This heater includes an overheat protection system that shuts off the heater when parts of the heater is getting excessively hot.
7. To completely shut the heater off, turn all the controls to OFF (0), and remove the plug from the socket-outlet.

Cleaning

Always disconnect the appliance from the power supply and allow to cool before cleaning.

Warning! Do not immerse this appliance itself in any liquid.

Do not use harsh chemicals or solvents as these may damage the plastics.

NOTICE: Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.

The Heater should be cleaned regularly to wipe out the dust on the surface, as this may affect the heater efficiency.

Wipe the exterior of the Heater with a damp cloth to remove dust and dirt only. Dry with a dry towel.

When not in use store safely and complete along with this manual.

When storing your heater in the off-season, it is important to keep it in a safe dry location. It is important to protect the heater from any dust. We strongly recommend using the original box, when storing the fan away.

SAFETY

To avoid any risk of risk of fire, shock hazard or personal injury, follow these guidelines.



Warning! When not in use or before cleaning, always disconnect the appliance from the mains supply

Warning! Do not splash with liquids. Do not allow the appliance supply plug and cord to get wet or be immersed in any liquid. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

Warning! Disconnect from the mains supply and switch off when not in use.

Warning! Earth Safety: This appliance must be earthed. Only connect to a suitably earthed 220-240V ~ 50/60Hz supply socket.



Warning! Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Extreme caution is necessary when any heater is used by or near children, invalids or elderly person and whenever the heater is left operating and unattended. Avoid leaving an operating heater unattended. Avoid using heater while sleeping.

Warning! Safely dispose of any plastic bags or other packaging that may present a hazard to young children of suffocation or choke hazard.

Warning! For household indoor use only, do not use outdoors. Not for commercial use.

Warning! Do not abuse or damage the supply cord. If for any reason the cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. A replaceable cord must be replaced with an authorised replacement from an authorized service agent.

Warning! This appliance must only be used with a genuine replacement cord set marked with the same markings as the one supplied

Warning! Keep the appliance and supply cord away from other heat sources.

Warning! The appliance must not be used if the appliance is damaged.

Warning! Do not leave this appliance unattended while in use. Always unplug any appliance when not in use.

Warning! Use the heater in a well-ventilated area. Do not insert or allow objects to enter any ventilation or exhaust opening. To prevent a possible fire, do not block air intakes or exhaust openings in any manner.

Warning! Do not use on soft surfaces, like a bed, where openings may become blocked. Use the heater on flat, dry surfaces only.

Warning! Do not place this heater near flammable materials, surfaces or substances, as there may be a risk of fire. Keep the above flammable materials, surfaces or substances at least 1m from the front of the product and keep them away from the sides and rear.

Warning! A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or other volatile or flammable liquids are used or stored.

Warning! Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electrical shock, fire or damage to the heater

Warning! Fire risk exists if the heater is covered by or positioned close to curtains or other combustible materials.

Warning! Do not place the heater near a bed, because objects such as pillows or blankets can fall off the bed and be ignited by the heater.

Warning! In order to avoid overheating, do not cover the heater.

Safety:

For household indoor use only, do not use outdoors. Not for commercial use.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

Always allow a gap around the appliance and do not cover the appliance.

This appliance must not be located directly below a socket outlet.

Use

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments

Warning! Do not tip over.

Warning! Do not move when in operation.

Specifications

MA0278CH-B1500:

220-240V~50/60Hz,

1300-1500 Watts

MA0279CH-B2000:

220-240V~50/60Hz,

1700-2000 Watts