

Micasa



30L Mini Oven with Twin Hotplates

Model: MA0080MO

READ AND FOLLOW THESE INSTRUCTIONS. RETAIN FOR FUTURE REFERENCE



Electrical Safety and You

Before using this appliance please read and fully understand the safety directions in this manual. Ensure that you know how to operate the appliance. All electrical equipment presents a risk to the end user. We ask that you use this appliance in a sensible safe manner in accordance with the instructions supplied for your own safety.

If for any reason the appliance does not function correctly or shows signs of damage please return it immediately to the retailer or contact the help line.

New Zealand toll free 0508 ASIAPAC (274 2722)

Australia call +64 9 974 9206

Web www.micasa-appliances.com

*Visit our website to view more **MICASA** quality products, retail locations and customer support.*

Features

- 30 Litre Capacity Oven
- 1400 watt Convection Oven
- Perfect for grilling, roasting, baking and toasting
- 60 minute timer with bell
- 100°-250°C Temperature selection range
- 7 Stage cooking options selector
- Rotisserie function
- Power On indicator
- Double glass door
- Stainless steel oven door handle
- Dual hotplates: Left – 185mm – 1000W, Right – 155mm – 600W
- Includes enamel bake tray, bake tray handle, wire rack, crumb tray, Rotisserie rod with 2 prongs & rotisserie rod holder

Please note: The small hotplate and oven will only work concurrently if you are wanting to use the oven and hotplate at the same time. The twin hotplates and oven do not operate at the same time due to the high wattage generated by both cooking methods. This is normal for products of this type. Oven requires 10cm free space on all sides around the appliance for adequate air circulation.



Operation Guide

Power Connection

Connect the appliance to a suitable 220-240V ~50Hz power supply only. This appliance is designed to operate safely across both New Zealand and Australian power supplies.



This appliance must be earthed. It is a class 1 appliance.

Power Consumption

This appliance is designed to work within the NZ power system constraints and maximum loading requirements. The maximum available power usage on any standard 10A 240V outlet supply is 2400 watts. Therefore the appliance can only be used with combinations that require a power input below this power level. This appliance allows for the oven to be used in conjunction with the small element only. The large element cannot be used with the main oven function in combination.

Heating Selection Options

The mini oven has a seven position selector switch as follows

- *Grill + Rotisserie + Fan*
- *Bake*
- *Bake + Grill + Rotisserie + Fan*
- *Bake + Grill + Rotisserie + Fan + Small Element*
- *Large Element*
- *Small Element*
- *Large + Small Element*



First time Use

First Time Use – Vapours!

When first used there may be a small amount of smoke or vapours, this is normal. The heating elements are coated with a protected coating during transit to protect them from possible corrosion. Plug the appliance in, select Bake option and run for a 5 minute period without food.

Location

Place the appliance on a secure heat resistant bench or table top away from combustible material such as curtains and walls. Connect to the mains supply. Do not place or store objects on the appliance



Allow a gap around the appliance of 10cm

Oven Tray and Rack

Crumb Tray

It is advised to always use the oven with the crumb tray fitted in the bottom. This will make for easier cleaning. Clean regularly.

Bake Tray / Wire Rack Installation Height

The oven is fitted with 3 height fitting options suitable for bake, grill or toast cooking. Position as required

Rack Position Guide

Top – Grill Broil function

Middle – Toast Pizza Bagel function

Lower – Roast Bake and preheat



Cooking Options

Bake

1. Select the desired element heating operating configuration Bake + Grill (rotisserie and fan options) on the selector switch.
2. Turn the timer dial to the desired cooking time.
3. Turn the thermostat dial for the desired temperature.
4. The power on indicator will light.
5. Open door and place oven tray with food item into the oven at the desired height. Close the oven door.
6. When finished baking, turn the temperature knob fully anti clockwise and turn the function switch to **OFF** to turn the oven off. Remove baking tray using heat proof gloves or the bake tray handle.

Caution: If the timer has not returned to **OFF** allow it to return to the **OFF** position by itself. The timer is a manual timer and forcing it off may damage it over time. Allowing it to return to zero will not affect the oven operation.

Grill

1. Select the desired element heating operating configuration Grill (rotisserie and fan options) on the selector switch.
2. Turn the timer dial to the desired cooking time.
3. Turn the thermostat dial for the desired temperature.
4. The power on indicator will light
5. Place the food item in the oven leaving the door half open.
6. When finished cooking, turn the temperature knob fully anti clockwise and turn the function switch to **OFF** to turn the oven off. Remove baking tray using heat proof gloves or the bake tray handle.

Caution: If the timer has not returned to **OFF** allow it to return to the **OFF** position by itself. The timer is a manual timer and forcing it off may damage it over time. Allowing it to return to zero will not affect the oven operation.



Warning! Hot surfaces

When cooking the outer surfaces reach high temperatures. Handle with care. Use handles and knobs and heat proof gloves.

Cooking Guide

<u>Food</u>	<u>Time (min)</u>	<u>Temp</u>	<u>Shelf Position</u>
Bread	9-12	190°C	Middle
Cakes	25-35	190C	Bottom
Pizza	12-15	200C	Middle
Chicken	30-40	220-250°C	Rotisserie
Fish	15	250°C	Top


Helpful Information

250°C = 482°F	1lb = 453g
200°C = 392°F	3lb = 1.360kg
150°C = 302°F	5lb = 2.265kg
100C = 212°F	10lb = 4.53kg

Rotisserie

Note. When selected the rotisserie motor will operate regardless of whether you have the rotisserie accessory fitted.

The rotisserie accessory connects to the internal motor drive socket located on the middle right of the oven wall. To fit the rotisserie, connect one end to this drive and then fit the supporting end to the left support of the oven wall. The rotisserie will rotate automatically when the selection with that option is chosen. **Note.** The holder only fits correctly in one position.

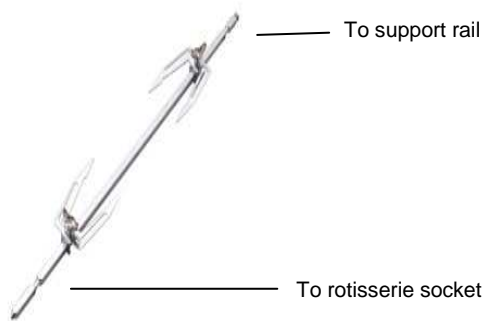

Fan Operation

The fan will operate and circulate the hot air when the fan selection mode is chosen, creating an even temperature and heating within the oven

Cleaning



Warning!

Electric shock risk! Do not immerse this appliance or supply cord in any liquid. Always disconnect from the mains supply before cleaning.

Scalding or Burns! Allow it to cool completely before cleaning. Hot surfaces create a hazard.

Damage! Do not use harsh abrasives, solvents or scouring material as they may damage the metals or plastics.

Outer

Clean the outer case with a warm damp clean sponge cloth, dry with a dry towel. If required use a little mild detergent on the sponge.

Inner

Wipe the inside of the oven with a hot damp sponge cloth. Dry before re use. A mild cleaning spray or detergent may be used. Apply to the sponge, not the oven.

Door

Wipe the glass with a hot damp sponge, dry with a dry towel. Clean the glass surface with a glass cleaner spray if necessary.

Accessories

Wash all accessories and trays in hot water and detergent, dry with a dry towel.



Warning! Crumb Tray

Empty regularly as any residual build up may present a fire hazard and effect the operation of the oven.



Important Safety Instructions

Please read all these safety instructions carefully before use.

Follow these **WARNINGS!**

Warning! Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision or instruction concerning safe use of the appliance by a person responsible for their safety. Young children must be supervised to ensure that they do not play with the appliance.

Safely dispose of any plastic bags or other packaging that may present a hazard to young children of suffocation or choke hazard.

Warning! Unattended Appliances

Do not leave any appliance unattended when in use.

CAUTION! This appliance must not be operated by means of an external timer or separate remote control system.

Warning! Safety

For household indoor use only, do not use outdoors.

Not for commercial use.

Do not let the supply cord hang over the edge of any table or bench as young children may pull on the cord creating a risk of electric shock, burns, scalding, personal injury or damage.

Warning! Heat

Always place the appliance on a heat resistant surface.

Always allow a gap around the appliance and do not cover the appliance.

Warning! The temperature of accessible surfaces may be high when the appliance is operating.

Warning! Hot steam may be ejected when opening the door!

Warning! Moisture

Do not immerse this appliance in any liquid. Do not operate with wet hands or near any vessel filled with water. Do not splash the appliance with water

Warning! Power Cord

Do not abuse or damage the supply cord. If for any reason the cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. A replaceable cord must be replaced with an authorised replacement from an authorized service agent.

Warning! Use

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments
- farm houses

- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.

Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.

Warning! Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not cover any part of the appliance with metal foil.

Do not store items in or on the appliance.

Do place cardboard, plastic, paper or similar in the oven.

Do not use the appliance for any other than its intended purpose.

Warning! Service or damaged

Refer all servicing to authorised personal. Return it to the retailer if it is damaged in any way.

Warning! If the element cooking surface is cracked, switch off the appliance to avoid the risk of electric shock.

Distributed by

Asia Pacific Brands Ltd
PO Box 113001 Broadway
Newmarket, 1149
Auckland, New Zealand