

micasa



5 CUP RICE COOKER

Model: MA0126RC-5C

READ AND FOLLOW THESE INSTRUCTIONS. RETAIN FOR FUTURE REFERENCE

Features

5 cup capacity

400 watt

Tempered glass lid

Removable non stick bowl

Cool touch handles

Automatic shut off at the end of cooking cycle

Keep warm function

Operation Guide

Power Connection

Connect to a suitable 220-240V ~50Hz power supply only. This appliance is designed to operate safely across both New Zealand and Australian power supplies. This appliance must be earthed.

Operation

Measure the rice using the plastic measuring cup. One cup of uncooked rice will make about 3 cups of cooked rice.

Wash rice 4 to 5 times with fresh water until water becomes clear. Be sure to wash in separate bowl or pan. Do not use the rice cooker pan for this purpose.

Place washed rice in inner pan and add water. Markings inside pan indicate required amount of water. Example: If you have used two measures of rice, add water to line marked 2, and so forth. This is a basic guide but you may vary the amount of water to suit your taste and type of rice used.

Place the pan inside the cooker (outside of pan should be clean and dry). Do not force. Turn slightly to right and left to be sure it is seated vertically, directly on the heating plate. Cover with lid.

Plug in power cord and depress cook switch completely to **COOK**. The pilot light will turn on. When rice is cooked, the cooker will switch to the keep **WARM** function automatically. **Note.** The appliance will not operate without the bowl in place.

If you do not require heat preservation, simply unplug the cord after switching off the appliance at the wall socket.

Keep the lid on for at least 15 minutes allowing the rice to be steamed fluffy by the remaining heat.

The system is designed to produce perfectly cooked uniform rice. However you can prepare rice to your taste adding more or less water than indicated.

Left over rice should be removed from the aluminium pan and kept in the refrigerator until ready to be served.

DO NOT! Use the aluminium pan to store leftovers in the refrigerator.

Recipes

Below are some basic suggestions.

Saffron Rice – Yellow Rice

Add a pinch of powdered saffron to the 1 cup of water used to cook rice. When cooked, add a little salt and pepper to taste, and mix well.

Aromatic Rice

When rice is cooked, fluff with a fork before adding ½ cup of chopped raisins and ½ teaspoon mixed spice or cinnamon.

Parsley Rice

When rice is cooked, fluff with a fork and add 1 tablespoon of butter, pepper and salt to taste, and 2 tablespoons of finely chopped parsley, or any fresh herbs from your garden.

Curried Rice

When rice is cooked, add ½ cup sultanas, and ½ - 1 teaspoon curry powder, depending on strength of curry powder, 2 finely chopped spring onions may also be added.

Lemon Rice

When rice is cooked, fluff with a fork and add 1 tablespoon butter, and 2 teaspoons grated lemon rind.

Green and Gold Rice

When rice is cooked, fluff with a fork and add 1-130g can of creamed corn and ½ cup of cooked green peas and a little chopped mint.

Note: Do not use any metal utensils with the non-stick removable rice bowl. If you intend to fluff the rice with a metal fork, remove the rice from the supplied container first.

Cleaning

Always disconnect the appliance from the power supply when cleaning.

Warning! Do not immerse this appliance itself in any liquid.

Wash the non stick bowl and glass lid in hot soapy water, dry with dry towel. Do not immerse the cooker base in any liquid. Wipe any food residue from inside the appliance with a damp cloth. Residue food items will bake onto the heating element if left in the inner cooking bowl area. DO NOT use scouring pads or abrasives to clean the cooking bowl as this will damage the non stick coating.



Important Safety Instructions

Warning! Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision or instruction concerning safe use of the appliance by a person responsible for their safety. Young children must be supervised to ensure that they do not play with the appliance. Safely dispose of any plastic bags or other packaging that may present a hazard to young children of suffocation or choke hazard.

Warning! Unattended Appliances

Do not leave any appliance unattended when in use. Do not place appliance under or near any combustible material such as walls, cupboards or curtains or near children. Always unplug any appliance when not in use.

Safety

For household indoor use only, do not use outdoors.

Not for commercial use.

Do not let the supply cord hang over the edge of any table or bench as young children may pull on the cord creating a risk of electric shock, burns, scalding, personal injury or damage.

This appliance must not be operated by means of an external timer or separate remote control system.

Always place the appliance on a heat resistant surface. Do not touch hot surfaces use handles.

Hot steam may be ejected during cooking or when opening the lid.

Always allow a gap around the appliance and do not cover the appliance.

This appliance must not be located directly below a socket outlet.

Warning! Moisture

Do not immerse the appliance in any liquid. Do not operate with wet hands or near any vessel filled with water. Do not splash the appliance with water.

Power Cord

Do not abuse or damage the supply cord. If for any reason the cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. A replaceable cord must be replaced with an authorised replacement from an authorized service agent.

Use

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments.

Service

Refer all servicing to qualified personal. This appliance has no user servicing parts or requirements. Return the appliance to the retailer if it is damaged in any way or not operating properly.

Specifications

220-240V~ AC 50Hz 400 Watts

Electrical Safety and You

Before using this appliance please read and fully understand the safety directions in this manual. Ensure that you know how to operate the appliance. All electrical equipment presents a risk to the end user. We ask that you use this appliance in a sensible safe manner in accordance with the instructions supplied for your own safety.

If for any reason the appliance does not function correctly or shows signs of damage please return it immediately to the retailer or contact the help line.

New Zealand call toll free 0508 ASIAPAC (274 2722)

Australia call +64 9 974 9206

Warranty

Retain your receipt as proof of purchase.

If for any reason the appliance does not function correctly or shows signs of damage please stop using immediately and return it immediately to the retailer.

This product is covered by a 12 month warranty by Harvey Norman (NZ) PTY Ltd. This warranty does not exclude any obligations to the consumer covered by the NZ Consumers guarantee act.

Distributed by

Asia Pacific Brands Limited

PO Box 113001 Broadway

Newmarket, 1149

Auckland, New Zealand