

# *Micasa*



## **CORDLESS KETTLE**

**Model: MA0236CK**

---

**READ AND FOLLOW THESE INSTRUCTIONS. RETAIN FOR FUTURE REFERENCE**

## Electrical Safety and You

Before using this appliance please read and fully understand the safety directions in this manual. Ensure that you know how to operate the appliance. All electrical equipment presents a risk to the end user. We ask that you use this appliance in a sensible safe manner in accordance with the instructions supplied for your own safety.

If for any reason the appliance does not function correctly or shows signs of damage please return it immediately to the retailer or contact the help line.

**New Zealand call toll free 0508 ASIAPAC (274 2722)**

**Australia call +64 9 974 9206**

[www.micasa-appliances.com](http://www.micasa-appliances.com)

**Visit our website to view more MICASA quality products, retail locations and customer support.**

## Features

1.7 Litre capacity

Transparent water level indicator

Automatic / manual switch off

Removable washable filter

Power on indicator

## Operation Guide

### Power Connection

Connect the base unit only to a suitable 220-240V ~50Hz power supply only. This appliance is designed to operate safely across both New Zealand and Australian power supplies. This appliance must be earthed.

### First Time Use

When first used fill the kettle with fresh water and boil as described. Discard this water to ensure that any impurities have been removed before use.

### Basic Operation

Fill the kettle to the desired water level and place securely onto the base. **WARNING!** Do not under fill. Do not overfill.

Connect the cordless base to the power supply.

Switch the kettle on by pressing the handle switch downwards.

The appliance will boil the water and switch off automatically.

**Note.** The appliance may be switched off manually at any time.

**Note.** When the kettle has boiled do not attempt to immediately switch the kettle back on, allow a small amount of time for the appliance to cool down.

**WARNING!** The lid must be securely closed or the automatic switch will not operate and the appliance will continue to boil causing a danger of dry boiling or damaging the appliance.

**WARNING!** To avoid electrocution, personal injury, damage to the appliance or scalding from ejected water, do not overfill or under fill, do not fill the kettle when it is connected to the base or when it is in operation.

**WARNING!** Always use care when moving any appliance containing hot water. Do not open the lid when the kettle is boiling.

**CAUTION!** Do not move while the kettle is switched on.

**WARNING!** Only use with the base provided.

**WARNING!** Ensure the kettle is switched OFF before removing from the base.

**CAUTION!** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed and the MINIMUM water level is reached. The element must be covered with water at all times.

## Cleaning

Always disconnect the appliance and the base from the power supply when cleaning.

**Warning!** Do not immerse this appliance in any liquid.

**Caution:** Do not use detergent to clean the inner. Rinse with clean water or periodically follow the below method to remove impurities left from minerals in the water.

**Caution:** to prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

### De-Scaling

In order to retain the kettle performance it is advised to periodically remove calcium deposits that build up from the water inside the kettle.

Half fill kettle with clean water.

Add 30ml of white vinegar and boil. Allow to stand for 1 minute.

Repeat 2-3 times depending on your local water supply.

Drain this water and rinse the inside with clean water.

Fill with clean water and boil as normal and discard.



## Important Safety Instructions

### Warning! Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision

or instruction concerning safe use of the appliance by a person responsible for their safety. Young children must be supervised to ensure that they do not play with the appliance.

Safely dispose of any plastic bags or other packaging that may present a hazard to young children of suffocation or choke hazard.

#### **Warning! Unattended Appliances**

Do not leave any appliance unattended when in use

#### **Safety**

For household indoor use only, do not use outdoors.

Not for commercial use.

Do not let the supply cord hang over the edge of any table or bench as young children may pull on the cord creating a risk of electric shock, burns, scalding, personal injury or damage.

**CAUTION!** This appliance must not be operated by means of an external timer or separate remote control system.

Always place the appliance on a heat resistant surface.

Always allow a gap around the appliance and do not cover the appliance.

**Warning!** Hot steam may be ejected when opening the lid.

#### **Warning! Moisture**

Do not immerse this appliance in any liquid. Do not operate with wet hands or near any vessel filled with water. Do not splash the appliance with water

#### **Power Cord**

Do not abuse or damage the supply cord. If for any reason the cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid hazard. A replaceable cord must be replaced with an authorised replacement from an authorized service agent.

#### **Service**

Refer all servicing to qualified personal. This appliance has no user servicing parts or requirements. Return the appliance to the retailer if it is damaged in any way or not operating properly.

#### **Use**

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments.

#### **Specifications**

220-240V~ AC 50Hz 1850-2200 Watts

#### **Distributed by**

Asia Pacific Brands Limited

PO Box 113001 Broadway  
Newmarket, 1149  
Auckland, New Zealand