



Nose Trimmer - Model MA0029NT

Before using this product please read and fully understand the safety directions in this manual. Ensure that you know how to operate the trimmer. If for any reason the product does not function correctly or shows signs of damage please return it immediately to the retailer or contact the help line. **New Zealand call toll free 0508 274 2722 Australia call toll free +64 9 974 9206**

This Nose Trimmer is for household use only. It is not designed for commercial use.

Battery

This trimmer requires 1 x AA 1.5V battery (not supplied). Remove the rear battery cover. Install the batteries according to the indication marks shown. Refit the battery cover.

Parts Details



Use

Turn on the trimmer by sliding the ON/OFF switch upwards to the ON position

Using a mirror carefully trim nose hair by moving the trimmer blade around the area

Warning! Do not force the unit further into the nose area than required.

Warning! The nose trimmer has sharp edges and may cause physical damage if used incorrectly.

Warning! Keep out of reach of young children.

Warning! Inspect the trimmer for damage before use.

Removing and Cleaning the Blade

Ensure the trimmer is switched OFF

To remove the blade cap, turn the cap so that the markings on it match the mark on the body front.

Pull the blade cap off to remove.

Separate the blade cap and holder.

Clean the blade and blade holder and cap in clean warm water.

Dry with a dry towel and replace

Warning! The trimmer is not designed for submerging in water or rinsing. It is not waterproof. Do not use harsh cleaners or solvents as these may damage the plastics.

Warranty

This appliance is covered by a 12 month warranty with proof of purchase. Return any faulty appliance along with your receipt to the retailer.