

Micasa

132-150CM LED DISPLAY TOWER FAN

OPERATION AND
STORAGE MANUAL



Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.

MODEL: MATFLED

Micasa

LED DISPLAY TOWER FAN

Thank you for choosing the Micasa LED Display Tower Fan. This fan has multiple functions to provide you with a cool, healthy and luxurious home experience. If operated and taken care of properly in accordance with these instructions, this appliance will be useful for many years.

Features

- 8 speeds
- 24-hour timer
- 3 modes: normal, natural or sleep
- LED display screen
- Ioniser: purifies air
- Remote control
- Oscillation
- Adjustable height

Before First Use

- Before first use, remove any stickers or similar from the appliance except for the rating label.
- Dispose of any plastic bags as they pose a risk of suffocation to young children.

Please read this manual before operating the appliance, and keep it in a safe place for future reference. If this appliance is transferred to a new owner, the manual should also be provided to the new owner.

Important Safety Measures and Precautions

WARNING:

To reduce the risk of fire, electrical shock or injury to a person, please note that this appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 
- Before using, please check whether the available voltage is in accordance with the rating label.
- Before using, please check that the wire and the plug are in good condition. If the power supply cord is damaged, in order to avoid unnecessary injuries, please contact an electrical technician.
- Use the fan on a flat, dry floor only.
- Proper installation is required before using the fan.
- Turn off the power at the wall before pulling out plug, and keep your hands dry when using the fan.
- Keep children away from the fan to prevent them from inserting their fingers into the grille or blades.
- Do not hold the fan tightly when the blades are oscillating.
- When cleaning, please use a soft cloth and don't use petrol, alcohol or other organic solvents.
- Do not use near curtains.
- Don't use the fan in hot, wet or chemical environments.
- The product is for household use only.
- Connect the appliance to a AC 230-240V supply of the voltage specified on the rating plate.
- Never leave the fan unattended while it is in use. Always turn the appliance to the OFF position and unplug it from the electrical outlet when not in use.
- Extreme caution is necessary when any fan is used by or near children, invalids or elderly persons, and whenever the fan is left operating and unattended.

- Do not run cord under carpeting, and do not cover cord with throw rugs. Keep the cord away from high traffic areas. Place the cord where it will not be tripped over.
- Do not operate the fan with a damaged cord or plug, or after the fan malfunctions, has been dropped or damaged in any manner.
- If the power supply cord is damaged, it must be replaced by the manufacturer, a licensed service agent or a similarly qualified person to avoid a hazard.
- Use the fan in a well-ventilated area. While using, keep the appliance at a distance of no less than 20cm from walls or corners to ensure the air intakes or exhaust openings are not be blocked unexpectedly.
- Do not insert objects, or allow fingers or any other objects near the grilles or blades. Do not block air intakes or exhaust openings in any manner.
- Do not immerse the fan in water.
- Do not use any cleaning chemicals such as detergents and abrasives. Do not allow the interior to get wet as this could create a hazard.
- When the unit is not in use, make sure that it is unplugged from the wall (power) socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.
- In case of malfunction, do not try to repair the fan yourself. This may result in a fire hazard or electric shock. Contact a qualified after-sales service provider.



Packaging

- After unpacking the appliance, check that all components are included in the package and that the appliance has not been damaged. If damage or incomplete delivery has occurred, contact your authorised retailer.
- Do not throw away the original packaging. It can be re-used for storage and transportation purposes.
- If disposal of packaging is necessary, please consider the environment, and recycle where possible. Children should be prevented from playing with polyethylene bags.

Appliance Description

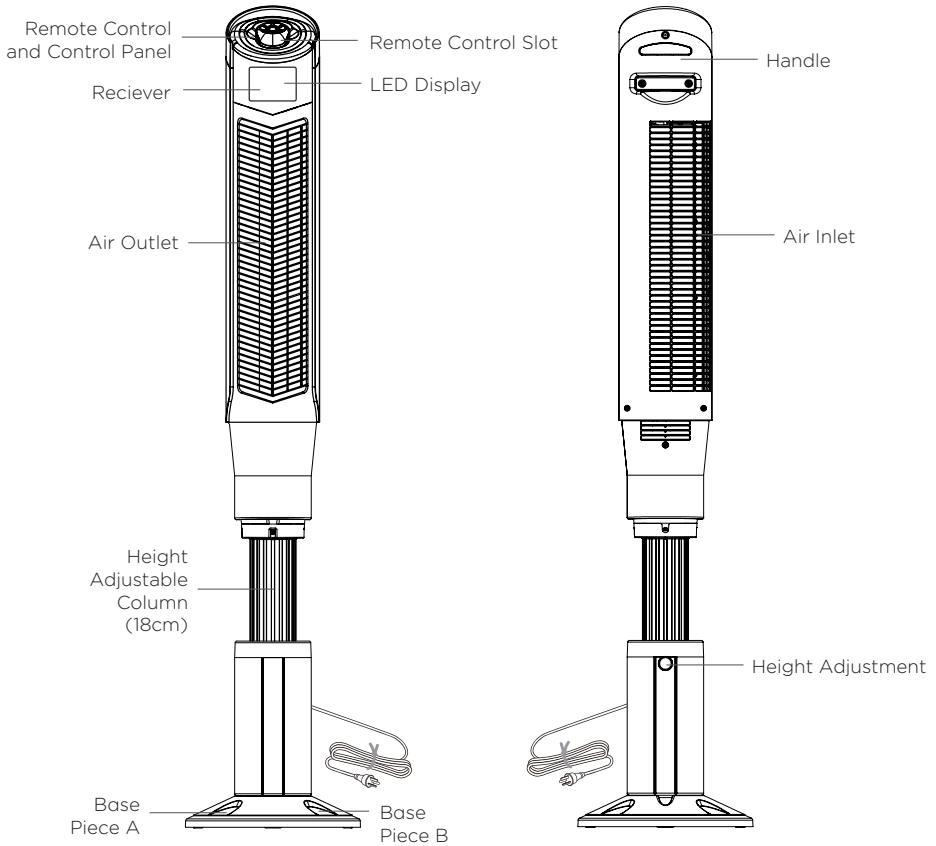

  LED DISPLAY, CONTROL PANEL AND REMOTE CONTROL

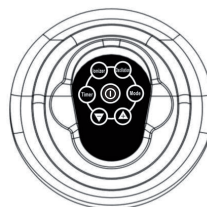
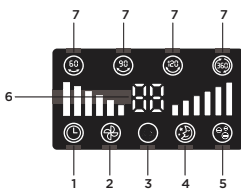


Remote controller

1. Timer setting
2. Normal wind mode
3. Sleep wind mode
4. Natural wind mode
5. Ioniser
6. Fan speed & timer display
7. Oscillation



  Installation

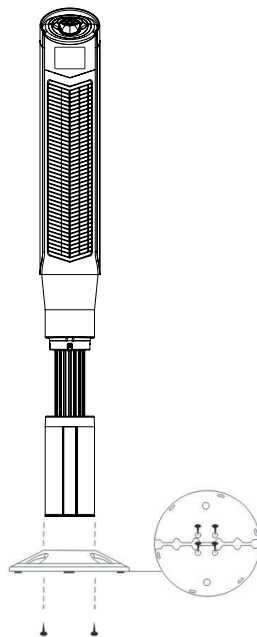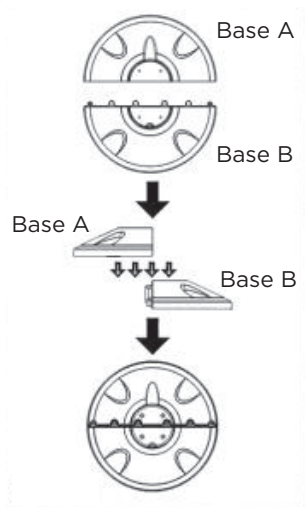1. Take out the two bases from the gift box. Connect base A and B to make one unit (see below).
2. Connect fan body with the base using the 4 screws provided (see below).





Operation

ON/OFF BUTTON

Press  to turn the fan ON/OFF. Press it once, and the fan will start operating. The LED display will show the default wind level 1. Press the  button again to stop the fan.

IONISER

Press  for the fan to start cleaning and freshening the air. Press again to stop the function. The Ioniser light indicator  will be displayed on the screen when this function is switched on.

MODE

Choose different wind modes (sleep, natural, normal) by pressing this button until the type of breeze desired is indicated on the LED display panel. The default wind mode is normal when this function is switched ON. To start natural or sleep mode, please set the wind speed first; then the natural or sleep wind mode will run from the maximum to minimum fan speed as a cycle.

Normal wind mode:

The  light indicator will be switched ON when this mode is selected.

Natural wind mode:

The  light indicator will be ON when this mode is selected.



The fan will run from selected maximum wind level to minimum wind level mode in a cycle.

Sleep wind mode:





The  light indicator will be ON when this mode is selected.

The fan will run from selected maximum wind level to minimum wind level in a cycle. This mode will reduce fan speed once every half hour. Then, level 1 fan speed will be maintained until the unit is turned off.


TIMER DISPLAY

Press this button to set the desired timer function. When the timer display flashes, press the  to choose the duration of time. Each press will increase time by 1 hour up to maximum of 24 hours. The LED display shows the timer setting. Press any button, or wait for 3 seconds to confirm the setting. To cancel the setting, press the timer button again, and press the  button to set as 00 Hr.

OSCILLATION FUNCTION

Press this button to activate the oscillation function to adjust airflow direction. The default oscillation angle is 60° and airflow direction can be selected for 60°, 90°, 120° or 360°. Press the same button again to turn off the oscillation function. The degree icon     will light up accordingly when the oscillation angle is selected.

SPEED

Choose from the total of 8 fan speed settings by pressing the button  from 1 - 8 levels. The default speed is level 1.

SWITCH

Press this switch to increase or decrease the timer or fan speed settings.

 
USING THE REMOTE CONTROL

The remote control must be pointed towards the receiver on the fan for function selection.

Do not block the line of sight between the remote control and the receiver.

Handle the remote control with care. Do not drop the remote control on the floor or bang it against hard objects.

USE OF BATTERIES

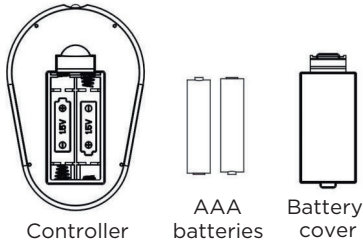

If the remote control will not be used for a long period of time, remove the batteries from the battery compartment.

 
The remote control uses two AAA batteries. Both of them should be new and replaced at the same time when they have discharged. (Batteries are not included.)

Clean battery contacts and also those of the device prior to battery installation.

Ensure the batteries are installed correctly with regard to polarity, matching +/- sides of the battery to the corresponding indications on the remote control.

Remove used and dead/discharged batteries promptly.

HEIGHT ADJUSTMENT

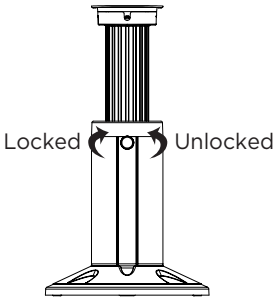

1. Rotate the height adjustment column lock in an anti-clockwise direction to unlock the height adjustment column.
2. Hold the tower fan body to adjust the range of height (0-20 cm).
3. Rotate the height adjustment column lock in a clock-wise direction to lock the height adjustment column tightly.

Cleaning and Maintenance

- Use only lukewarm water and mild detergent to clean the appliance. Do not use corrosive or acidic solutions.
- DO NOT wet or immerse the appliance, motor, switch, power cord or plug in water.
- If you don't use the fan for a long period of time please keep in a dry, cool place.

NOTE: This electrical appliance is manufactured in accordance with the relevant safety requirements. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user. Please contact the Customer Service Centre for after-sales service if required.

Specifications

Model: MATFLED

Height: 132-150cm

Power: 50W

Adjustable height: 18cm

Voltage: 220-240V

Frequency: 50Hz

Micasa

Customer Support

www.asiapacbrands.com

Helpline New Zealand call toll free 0508 274 2722

Australia call +64 9 974 9206

Distributed by

Asia Pacific Brands Limited

PO Box 301145 Albany,

Auckland 0752, New Zealand